
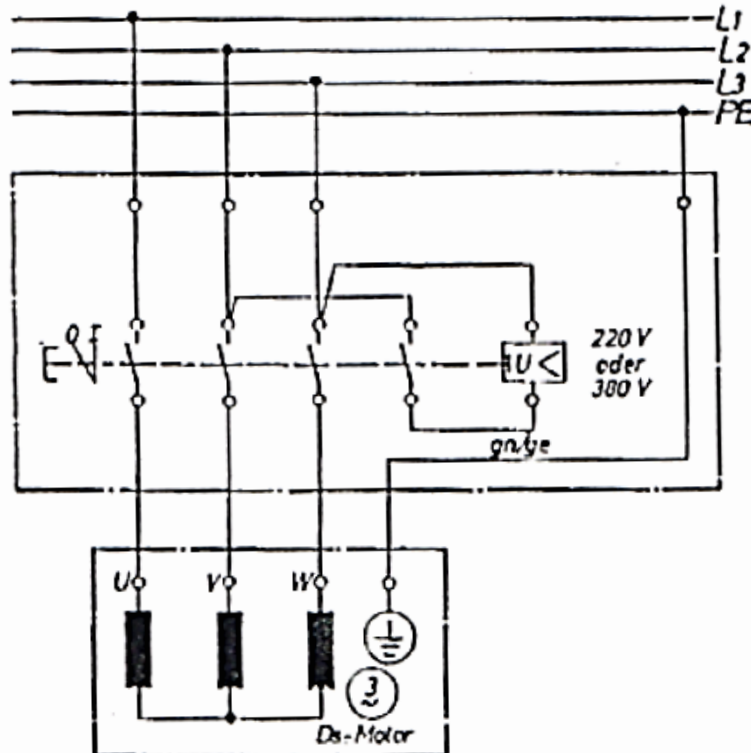


ELECTRICAL DIAGRAMS

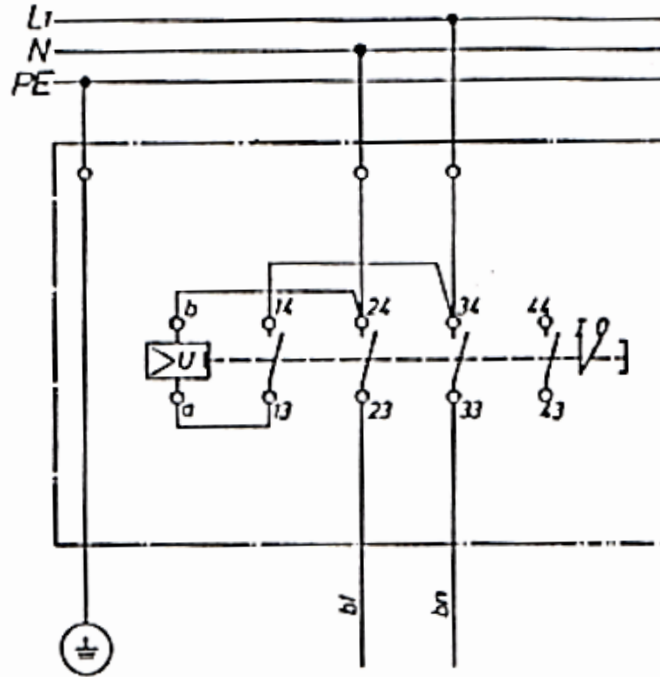

PARTS LIST

Item No.	Part Description	Part No.
1	Base	301002
2	Flange	301003
3	Spring Washer (x4)	13mm
4	Screw (M13 x 16mm L)	300999
5	Column	301005
6	Rack	301007
7	Handle	301008
8	Table Arm	301011
9	Table Bracket	301012
10	Worm	301056
11	Clamp Bolt	301009
12	Clamp Bolt	301010
13	Collar	301013
14	Screw	
15	Lock Handle	301070
15A	Lock Screw	302818
16	Feed Handle (3x)	301014
17	Feed Head	301016
18	Scale Sleeve	301017
19	Feed Shaft	301018
20	Belt Adjust Handle	301019
21	Head	301023
22	Wing Bolt	
23	Rod – A	301020
24	Rod – B	301022
25	Motor Plate	301021
26	Motor	302989
27	Spring & Cup	301025
28	Pulley Cover	
29	Screw	
30	Motor Pulley	302988

Item No.	Part Description	Part No.
31	Belt	303837
32	Rod Support	
33	Spindle Pulley	302990
34	Switch	301024
35	Insert Pulley	
36	Bearing 6203Z	300987
37	Quill (1.85")	301036
38	Bearing 6203Z	300987
39	Spindle	301037
40	Arbor	301038
41	Table	301035
42	Wedge	301039
N/A	Chuck (13mm)	301870
N/A	Key (13mm)	301968

Please contact factory for current prices.

ORDERING INFORMATION

Parts are available for direct purchase from Dake or through a distributor. When placing a parts order, you will need to provide the part number, name of part, and model number. All parts shipped F.O.B. Factory in Grand Haven, MI